



Installation instructions

Instructions d'installation Instrucciones de instalación Istruzioni per l'installazione Installatie-instructies Installationsanweisungen インストール手順 

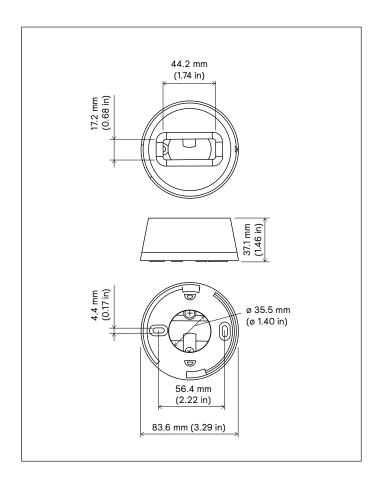

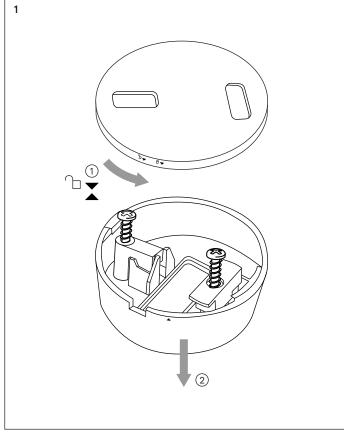

















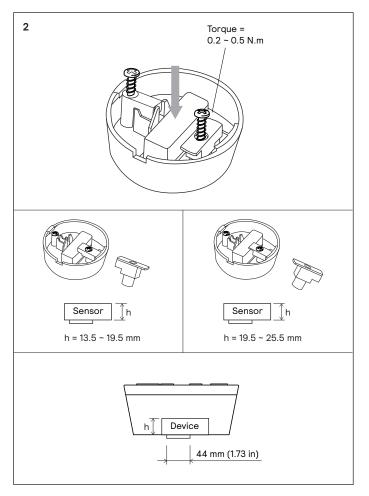

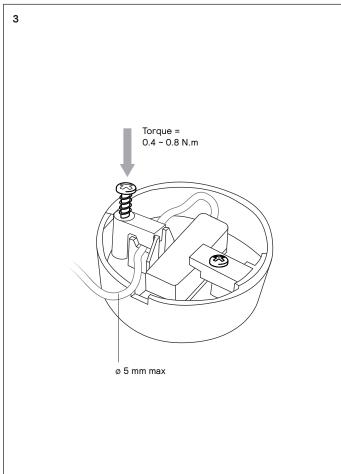

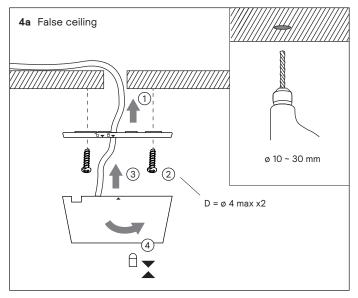

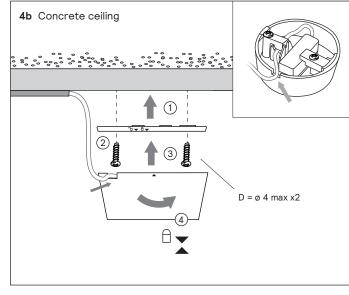



Be suitable for the sensor be powered by class 2 energy limited source for NA region or SELV for EU region.

Signify

© 2019-2025 Signify Holding. All rights reserved. The information provided herein is subject to change, without notice. Signify does not give any representation or warranty as to the accuracy or completeness of the information included herein and shall not be liable for any action in reliance thereon. The information presented in this document is not intended as any commercial offer and does not form part of any quotation or contract, unless otherwise agreed by Signify. All trademarks are owned by Signify Holding or their respective owners.

UK importer address: Signify Commercial UK Limited 2 Guildford Business Park GU2 8XG, UK

